

*“Degrees
Ahead in
Quality”*



The FC Series General Purpose Furnace is designed to provide years of continuous service while requiring a low investment cost.

Applications for this furnace include:

- * Annealing
- * Brazing
- * Diffusion Bonding
- * Ceramic Firing
- * Degassing
- * Glass Processing Studies
- * Melting
- * Sintering
- * Carbon Glass & Ceramic Composites
- * Heat Treating

Generally, the basic furnace System includes the following components:

- * Furnace Assembly
- * Power Supply
- * Heat Zone
- * Evacuation System
- * Inert Gas System



The furnace can be rated up to a maximum operating temperature of 2500° C (4532°F) and will operate in vacuum, inert atmospheres, Nitrogen and wet or dry Hydrogen.

FURNACE ASSEMBLY:

The chamber, front door and rear cover are double walled, 304L stainless steel. Each component is electropolished to attain highest vacuum quality. Ports are incorporated in the heat chamber for a sight window, thermocouples and process gas. Power to the heating element is supplied by nickel plated water cooled power feedthroughs located in the front door, rear cover and main chamber.

HEAT ZONE:

The refractory metal elements and heat shield assembly are fixed inside the chamber to allow easy loading of the fixtures and materials for processing. Elements are located on all sides of the heat zone for exceptional temperature uniformity. Graphite heat zones are available in differing heating configurations.

POWER SUPPLY:

Power supplies can be provided with any of these characteristics: three phase, 380 or 480 volts and 50 or 60 Hertz. A typical power supply incorporates a step down transformer, SCR, circuit breaker, contactor, amp and volt meters.

TEMPERATURE CONTROL:

Programmable process temperature controller and separate over temperature limiter are standard. Recorders and data logging devices specific to the Customer's requirements are available as options. Types of sensors include thermocouple, optical pyrometer or power transducer.

PUMPING SYSTEM:

Fully automatic PLC controlled pumping systems can be provided for the range of 10^{-2} Torr (rough vacuum with mechanical pump) through 10^{-9} Torr (high vacuum with cryo or ion pumps). Our standard system is automatic and consists of a diffusion or turbomolecular high vacuum pump, a rotary vane or oil free scroll type mechanical pump, isolation valves and vacuum gauge controller. The system will consistently operate in the $10^{-5}/10^{-6}$ Torr range.

INERT GAS/NITROGEN SYSTEM :

To allow operation using inert (Noble) gases or Nitrogen, a kit which includes inlet and outlet valves and a pressure/vacuum gauge is supplied.

WET OR DRY HYDROGEN SYSTEM:

This is an optional system that can be manual or fully automatic using flow control and variable percent mixing of Hydrogen with other gases. All necessary safety interlocks and devices such as blow-off port, igniter, etc., are included with this system. The system conforms to NFPA 86 Standard for Ovens and Furnaces.

For a comprehensive review of your specific requirements, please contact OXY-GON'S technical sales personnel for a customized proposal with specifications.




PO Box 40
Epsom, NH 03234-0040 USA
Phone: (603)736-8422
Fax: (603)736-8734
E-mail: sales@oxy-gon.com
Internet: www.oxy-gon.com



Model FC730 with mechanical vacuum pump



Model FC530 Tungsten Heat Zone

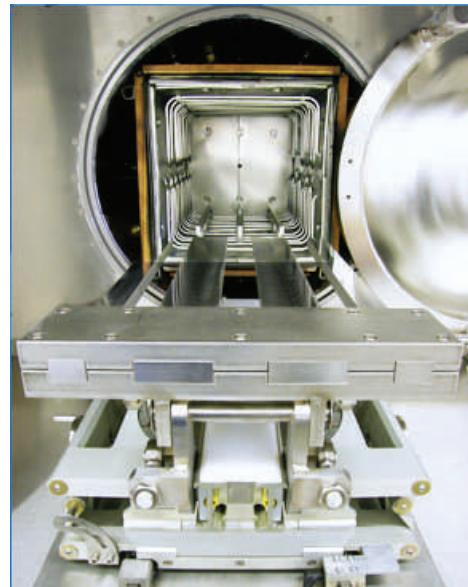

Model FC730 mounted to a glove-box with manual loader

For a comprehensive review of your specific requirements, please contact OXY-GON'S technical sales personnel for a customized proposal with specifications.

OXY-GON
INDUSTRIES, INC.

PO Box 40
Epsom, NH 03234-0040 USA
Phone: (603)736-8422
Fax: (603)736-8734
E-mail: sales@oxy-gon.com
Internet: www.oxy-gon.com